
Device Configuring ZXVPN Operation Manual

Contents

I. INTRODUCTION OF ZXVPN	1
II. LOGIN WEBUI	1
III. DEVICE NETWORK	2
IV. CONFIGURE ZXVPN	3

I. Introduction of ZXVPN

ZXVPN can create a virtual LAN to connect the receiver to the server, enabling access to WebUI in the background for providing remote technical support and services.

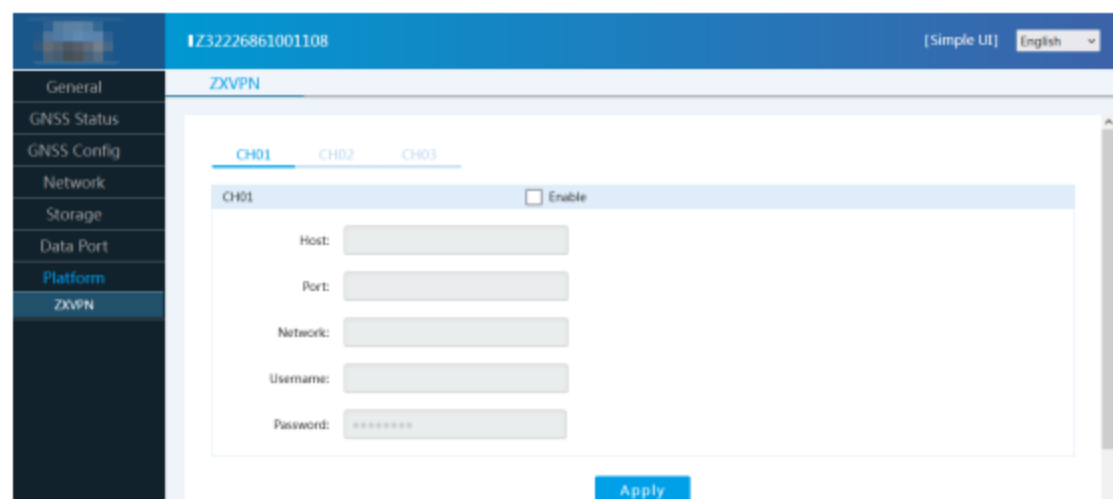


Figure 1

II. Login WebUI

1. First turn on the device, turn on the computer's wireless WiFi, find the name of the corresponding device's WiFi (the default is the device's SN) to connect, and click [Connect] to the network.

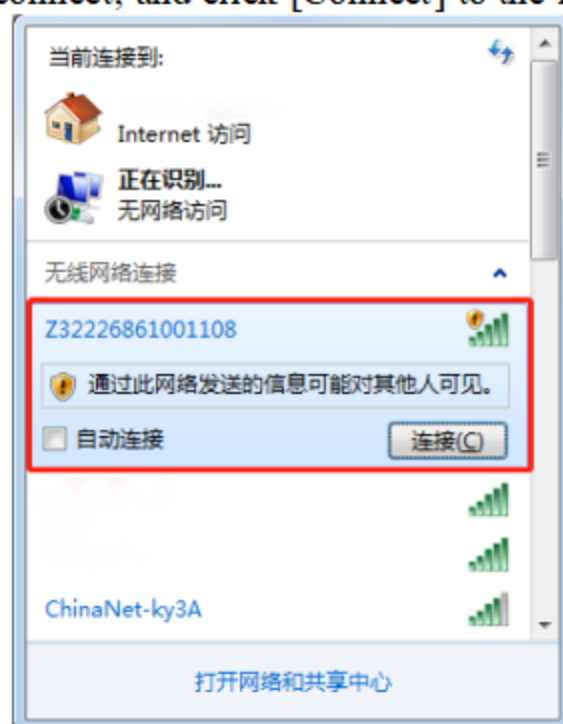


Figure 2

2. Open the Firefox browser and log in to the "10.10.10.10" website, click [Login], as shown Figure 3.

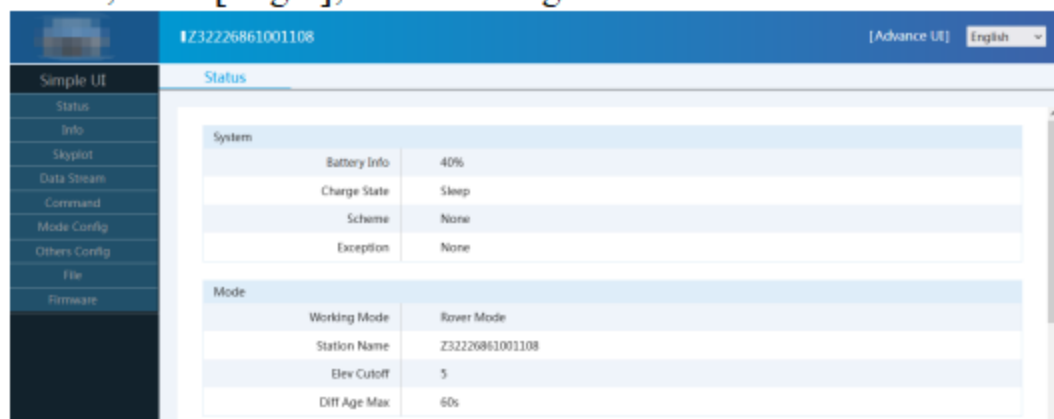


Figure 3

III. Device Network

To connect to the ZXVPN server, the device must insert the SIM card, enter the advanced options page, enable the mobile network and be online, as shown below.

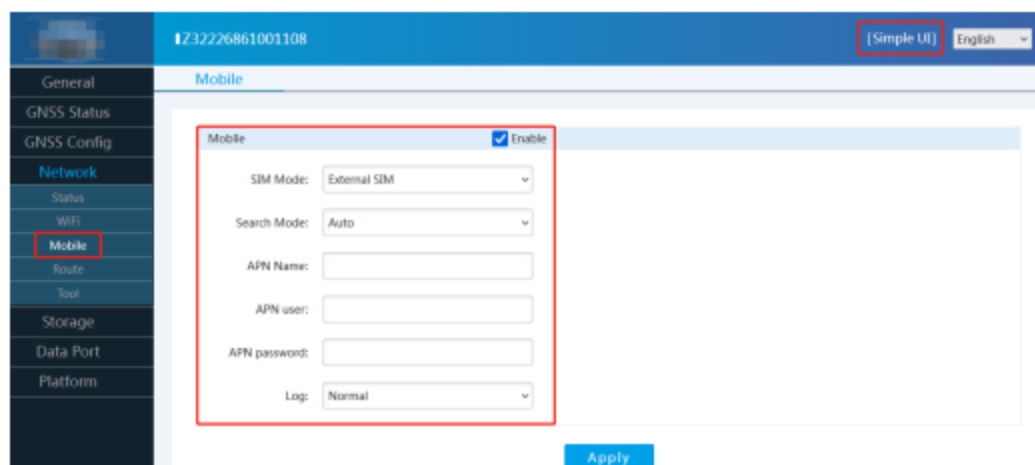


Figure 4

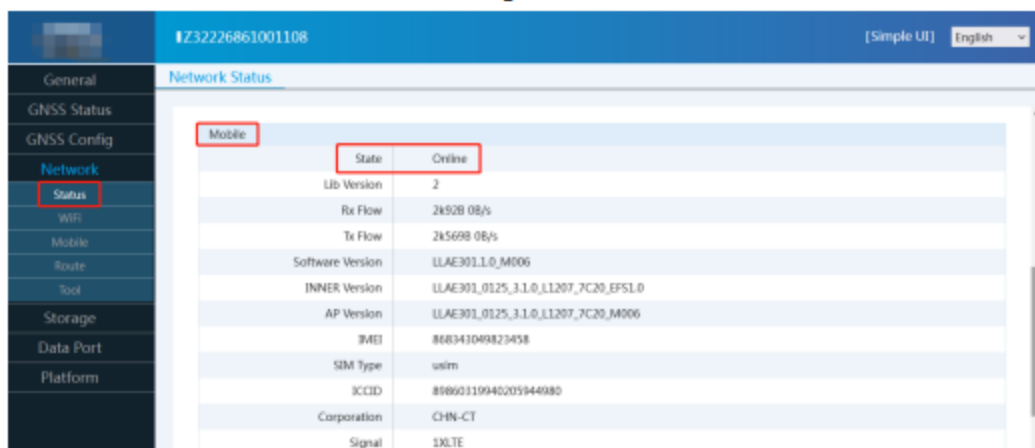


Figure 5

IV. Configure ZXVPN

First make sure that the device is connected to the external network, then click [Platform] → [ZXVPN], select [Enable], and Click [Use Default Value] to automatically fill in the following VPN configuration information, and click [Apply].

Address: zxvpn.devecent.com

Port: 8222

Network: TEST

User: zxvpn

Password: zxvpn

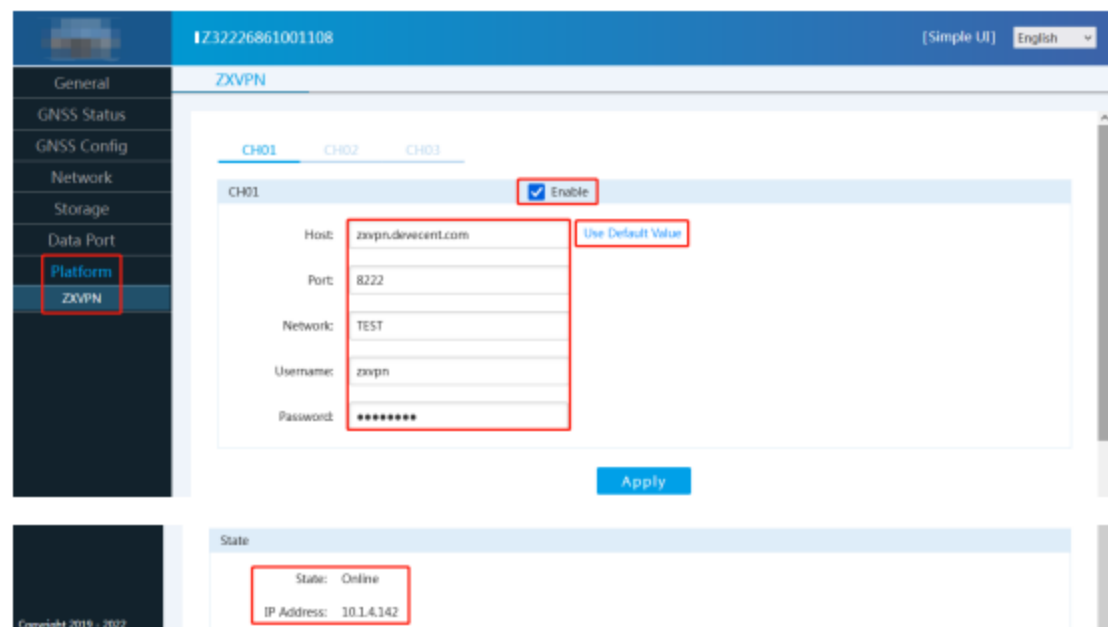


Figure 6

Note: After completing the configuration as shown in the above figure, please confirm below the webpage that the state is already showing "online" and the IP address.